

# Autodialler ECII

## CONNECTION EXAMPLE 1

- \* **ALL POWER SUPPLIED FROM THE TELEPHONE LINE:**
- \* ECII COP to be fitted behind the COP
- \* ECII BASIC to be fitted on top of CAR
- \* ECII TOC to be fitted on top of CAR
- \* ECII FLUSH for flush mount
- \* ECII SURF for surface mount without alarm push
- \* ECII ALBU for surface mount with alarm push

Existing  
Alarm Push



Autodialler ECII



Telephone Line or GSM Gateway


**ELECTROMATIC TELE-LINK LIMITED, T/A ETL UK**  
Tel: 01621 856 230, Fax: 01621 856 231  
E-mail: [info@etluk.eu](mailto:info@etluk.eu)

Turn the page '/',

# ECII CONNECTION EXAMPLE 6A

**FOR A KIT CONSISTING OF:**

- \* AUTODIALLER ECII COP
- \* PICTOGRAM DRIVER
- \* TOP-OF-CAR SPEAKER UNIT
- \* INDUCTIVE LOOP AMPLIFIER
- \* LIFT PIT STATION
- \* UNDER CAR SPEAKER UNIT

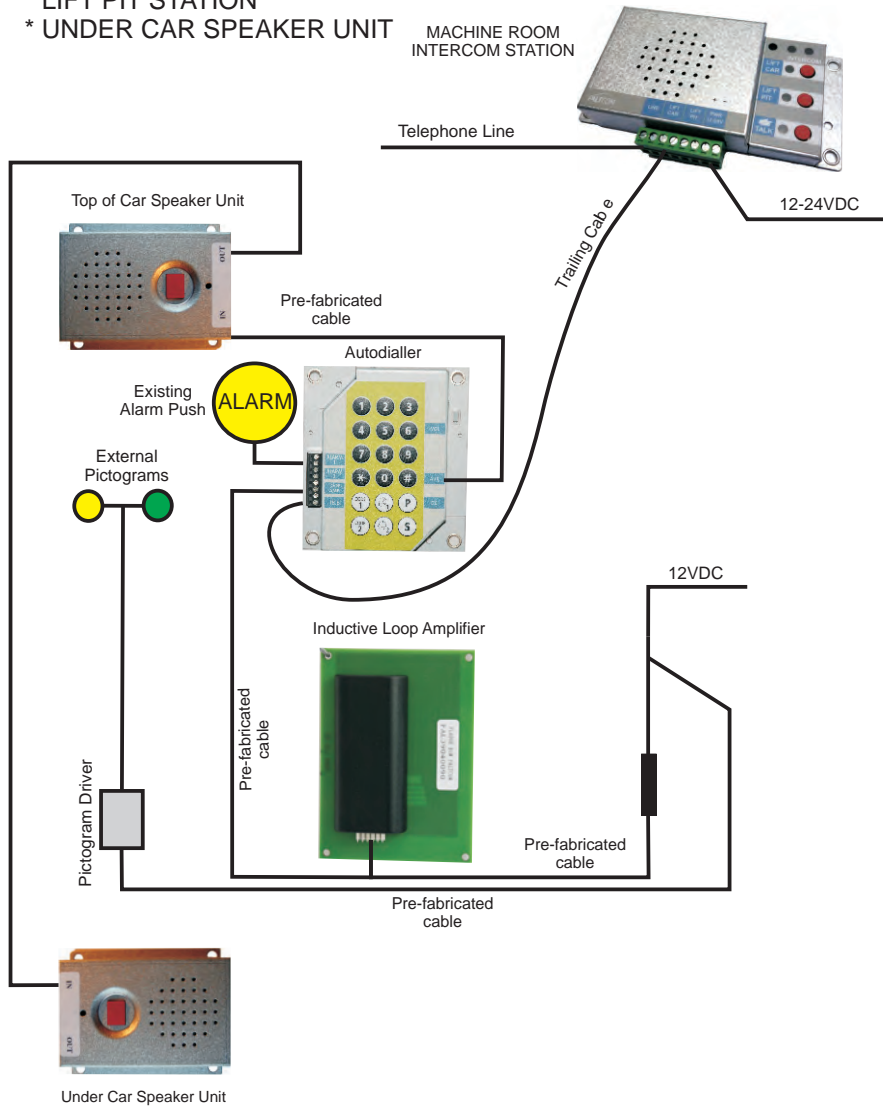

# ECII CONNECTION EXAMPLE 6C

**FOR A KIT CONSISTING OF:**

- \* AUTODIALLER ECII COP
- \* PICTOGRAM DRIVER
- \* TOP-OF-CAR SPEAKER UNIT
- \* INDUCTIVE LOOP AMPLIFIER
- \* LIFT PIT STATION
- \* MACHINE ROOM STATION

