

AUTODIALLER ECII COP VERSION UK
SHORT INSTALLATION AND ON SITE PROGRAMMING INSTRUCTIONS
INSTALLATION

ECII COP can be installed inside the COP, flush or surface mounted, with or without alarm push and be connected to GSM Gateway or analogue telephone line.

CONNECTIONS

Connect the telephone line and alarm push as shown on the drawing. The alarm push can be NO or NC WITHOUT VOLTAGE over the contacts. ECII COP is power supplied from an analogue telephone line or GSM Gateway. ECII can be connected to a machine room intercom unit, inductive loop amplifier, top of car unit and under car unit (or lift pit unit).

ON SITE PROGRAMMING USING THE INTERNAL KEYPAD

WAIT 20 SECONDS AFTER CONNECTING ECII TO THE TELEPHONE LINE BEFORE GOING INTO PROGRAMMING MODE: Disconnect the terminal block, - press the P-key and keep it pressed whilst reconnecting the terminal block, - release the p-key after hearing 4 bleeps and the green and yellow LEDs start to flash --- indicate that you are in programming mode. Start necessary programming. See separate instructions for REMOTE PROGRAMMING.

Input Code	Validation	Description	Description
P * 990 P	4 bleeps	Reset to factory default	Recommended when re-programming an ECII
P * 020 P	4 bleeps	Alarm push NO	Alarm Input 1. Normally open without voltage
P # 020 P	4 bleeps	Alarm push NC	Alarm Input 1. Normally closed without voltage
P 📞 ₁ Tel P	4 bleeps	Key in 1st. telephone number	Tel = telephone number for emergency
P 📞 ₂ Tel P	4 bleeps	Key in 2nd. telephone number	Tel = telephone number for emergency
P S 3 S Tel P	4 bleeps	Key in 3rd. telephone number	Tel = telephone number for emergency
P S 4 S Tel P	4 bleeps	Key in 4th. telephone number	Tel = telephone number for emergency
P * 080 * 3 P	4 bleeps	Number of days for test	3 = automatic test call every 3 days
P # 080 P	4 bleeps	Cancel test call function	No test calls possible
P * 300 * Tel P	4 bleeps	Key in test call tel. number	Tel = telephone number for aut. test call
P 📞 ₁ 0 * Tel P	4 bleeps	PABX prefix 0 to dial out	Example for 1st emergency number. Each * = 2 sec pause. For longer pause press star again
P 📞 ₁ # P	4 bleeps	Testing the 1st. telephone number	Testing the 1st emergency alarm receiver
P * 060 P	4 bleeps	P100 protocol for test calls	EITHER
P * 061 P	4 bleeps	CPC protocol for test calls	OR
P * 301 * N P	4 bleeps	Key in 1 (N=1) if only one ECII is connected to the telephone line (must be done when connected to software/hardware) or the Autodialler's ID number (max 8 digits)	
P * 410 * Mess P	4 bleeps	Record voice message for the car. "Calm down message"	Mess = message. Start speaking immediately after pressing the last *, max 16 seconds
P * 420 * Mess P	4 bleeps	Record voice message for the recipient. "Site address message"	Mess = message. Start speaking immediately after pressing the last *, max 16 seconds
P * 053 * 1 P	4 bleeps	Alarm push delay 0 - 60 seconds	1 = alarm push delayed 3 seconds
P * 300 P	4 bleeps	Testing the test call	A test call will automatically be sent out after exiting programming mode.
P * 321 P	4 bleeps	Without acknowledgement	Emergency calls to 1 telephone number only. The recipient just hangs up at the end of the communication.
P * 324 P	4 bleeps	With acknowledgement. To be programmed when phoning up more than 1 telephone number	Emergency calls to several telephone numbers. If the first number does not answer it will dial up the next number within 1 minute. Recipient must press "0" before hanging up.
P # P		Exit programming mode	

HOTLINE: Go into programming mode and use input code: P 📞 * P

GRAY = HIGHLIGHTED FUNCTIONS ARE FACTORY DEFAULT

ADJUSTING THE LOUDSPEAKER VOLUME: The volume can be adjusted by help of a potentiometer. Turn the potentiometer anti clockwise for maximum volume (leave it 1 mm from max). Turn clockwise to reduce volume.

ETL UK. Tel: 01621 856 230. Fax: 01621 856 231. E-mail: info@etluk.eu