

# AUTODIALLER ECII COP Version UK

## SHORT INSTALLATION AND REMOTE PROGRAMMING INSTRUCTIONS

### INSTALLATION

ECII COP can be installed inside the COP, flush or surface mounted, with or without alarm push and connected to GSM Gateway or analogue telephone line.

### CONNECTIONS

Connect the telephone line and alarm push as shown on the drawing. The alarm push can be NO or NC without voltage over the alarm push contacts. ECII COP is power supplied from an analogue telephone line. ECII COP can be connected to a BT / PSTN or PABX analogue line or GSM interface (using the mobile phone network).

### REMOTE PROGRAMMING USING AN ORDINARY TELEPHONE

Phone up the unit. After 1 ringing signal the unit answers with 3 beeps. **Press # 1** (if more than one ECII is sharing a telephone line: **press #2** for number 2, **press #3** for number 3 ..... up to #9), after hearing 3 beeps **press # PIN code #** (factory default 1111). After hearing 4 beeps start necessary programming. **Press \* 000 #** before hanging up. See separate instructions for ON SITE PROGRAMMING.

Input Code	Validation	Description	Description
* 990 #	4 beeps	<b>Reset to factory default</b>	<b>Recommended when re-programming ECII</b>
* 20 #	4 beeps	Alarm push NO	Alarm Input 1. Normally open without voltage
# 20 #	4 beeps	Alarm push NC	Alarm Input 1. Normally closed without voltage
* 001 * Tel #	4 beeps	Key in 1st. telephone number	<b>Tel</b> = telephone number for emergency
* 002 * Tel #	4 beeps	Key in 2nd. telephone number	<b>Tel</b> = telephone number for emergency
* 003 * Tel #	4 beeps	Key in 3rd. telephone number	<b>Tel</b> = telephone number for emergency
* 004 * Tel #	4 beeps	Key in 4th. telephone number	<b>Tel</b> = telephone number for emergency
* 080 * 3 #	4 beeps	Number of days for test	<b>3</b> = automatic test call every 3 days
# 080 #	4 beeps	Cancel test call function	
* 300 * Tel #	4 beeps	Key in test call tel. number	<b>Tel</b> = telephone number for aut. test call
* 001 * 0 *	4 beeps	PABX prefix 0 to dial out	Example for 1st emergency number. Each * = 2 sec pause. For longer pause press star again
* 001 #	4 beeps	Test of the 1st telephone number	Testing the 1st emergency alarm receiver
* 060 #	4 beeps	P100 protocol for test calls	<b>EITHER</b>
* 061 #	4 beeps	CPC protocol for test calls	<b>OR</b>
* 301 * N #	4 beeps	Key in 1 ( <b>N=1</b> ) if only one ECII is connected to the telephone line (must be done when connected to software hardware or use the Autodialler's ID number (2-10 digits)	
* 410 * Mess #	4 beeps	Record voice message for the car. "Calm down message"	<b>Mess</b> = message. Start speaking immediately after pressing the last *, max 16 seconds
* 420 * Mess #	4 beeps	Record voice message for the recipient. "Site address message"	<b>Mess</b> = message. Start speaking immediately after pressing the last *, max 16 seconds
* 053 * 1 #	4 beeps	Alarm push delay 0 - 60 seconds	<b>1</b> = alarm push delayed 3 seconds
* 300 #	4 beeps	Testing the test call	A test call will automatically be sent out after the programmed sequence
* 321 #	4 beeps	Without acknowledgement	Emergency calls to 1 telephone number only
* 324 #	4 beeps	Phoning up several telephone numbers	Emergency calls to several telephone numbers. Recipient must press "0" before hanging up
* 000 #		Exit programming mode	

### HIGHLIGHTED FUNCTIONES ARE FACTORY DEFAULT

**ADJUSTING THE LOUDSPEAKER VOLUME:** The volume can be adjusted by help of a potentiometer. Turn the potentiometer anti clockwise for maximum volume. Turn clockwise to reduce volume.

**UP TO 9 ECII CAN SHARE 1 TELEPHONE LINE. DC / DC CONVERTER MUST BE FITTED**

**HOTLINE CONNECTION TO A PBX:** Go into programming mode and use input code \* 001 \* \* #.

**ETL UK. Tel: 01621 856 230. Fax: 01621 856 231. E-mail: info@etluk.eu**